

3. Outlines and Connector Positions

Hardware manual

www.pinetek-networks.com


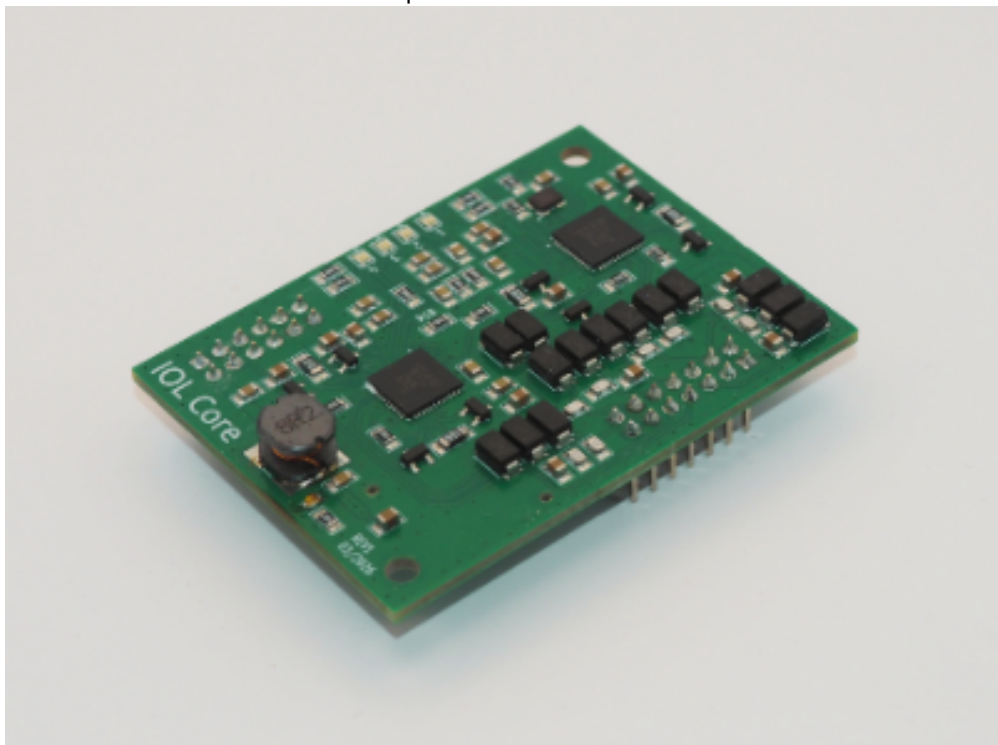


Table of Contents

3. Outlines and Connector Positions	5
3.1 <i>Top and Bottom Definition</i>	5
3.2 <i>Outlines and Positions (TOP View)</i>	5


3. Outlines and Connector Positions

3.1 Top and Bottom Definition

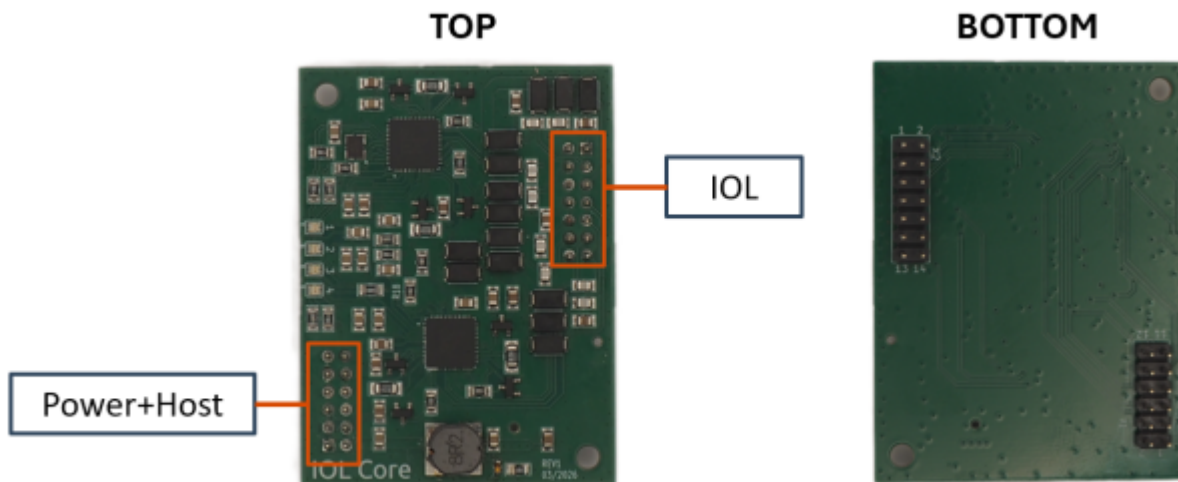

Ensure the correct orientation of the IOL Core4 module. Misalignment or rotation can cause damage on the host system and the IOL Core4. Do not plug or unplug while powered.

3.2 Outlines and Positions (TOP View)

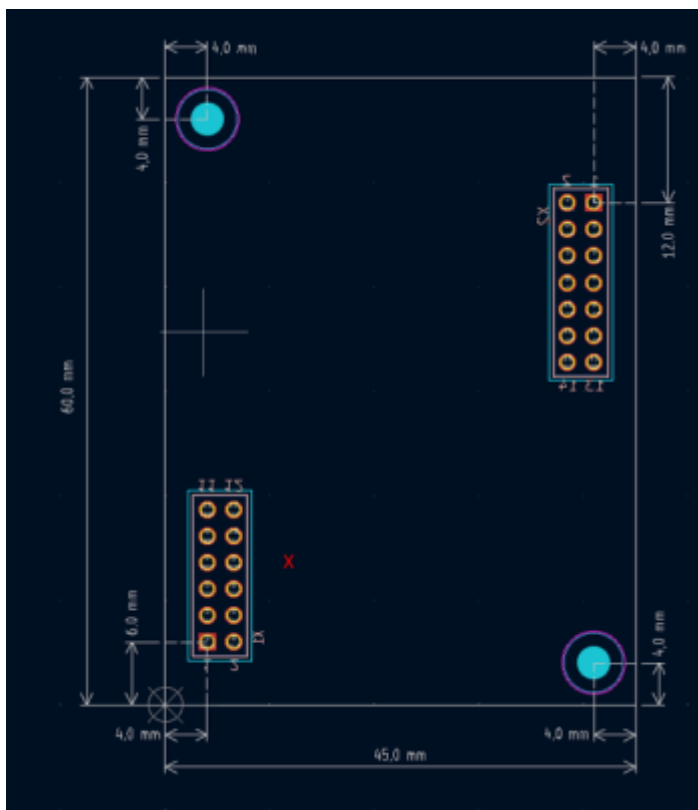

The mounting holes (cyan) are suitable for M3 screws/standoffs