


# 3.6 CMD\_STATUS

Application Manual

[www.pinetek-networks.com](http://www.pinetek-networks.com)

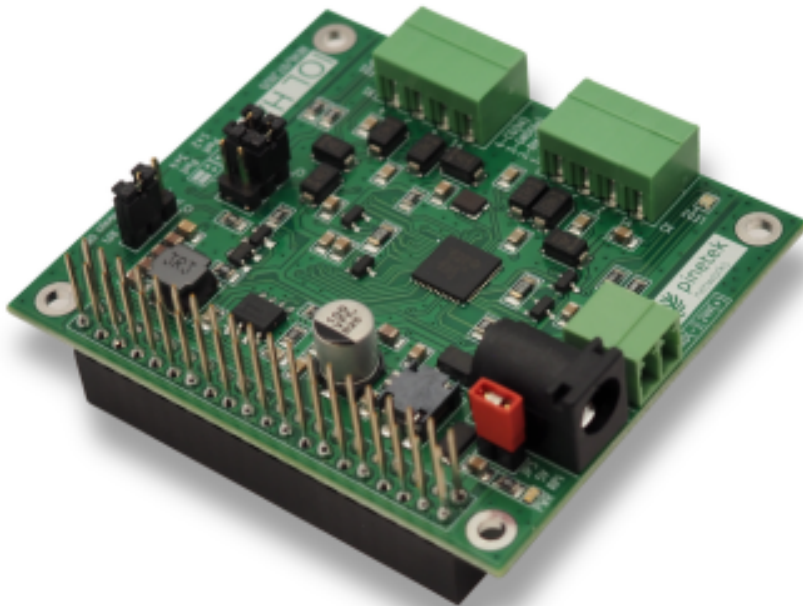



# Table of Contents

**3.6 CMD\_STATUS** ..... 5



## 3.6 CMD\_STATUS

The status command returns the status of the corresponding port.

### Command:

Octet #	Usage
0	Command ID = 0x06
1	Port index 0x00 or 0x01

### Return Success:

Octet #	Usage	Comment
0	Command ID = 0x06	
1	Port index 0x00 or 0x01	
2	Process data IN valid	0x00 = Not valid 0x01 = Valid
3	Process data OUT valid	
4	Transmission rate	0x00 = Detection Failure 0x01 = COM1 (4.8 kbps) 0x02 = COM2 (38.4 kbps) 0x03 = COM3 (230.4 kbps)
5	Process data IN length	
6	Cycle time	
7	Process data OUT length	
8..9	Vendor ID	16-bit value
10..13	Device ID	32-bit value
14	Power	0x00 = Power OFF 0x01 = Power ON