

2 Getting started

User manual

www.pinetek-networks.com



Table of Contents

2 Getting started 5

2 Getting started

This section describes how to get started with the Pinebox, connecting to the web interface, configuring a distance sensor and transferring the nodes to Node RED. In Node-RED we will create flows to forward the data to dashboards and to the internal database.