

Default flows for Node-RED

Hardware manual

www.pinetek-networks.com

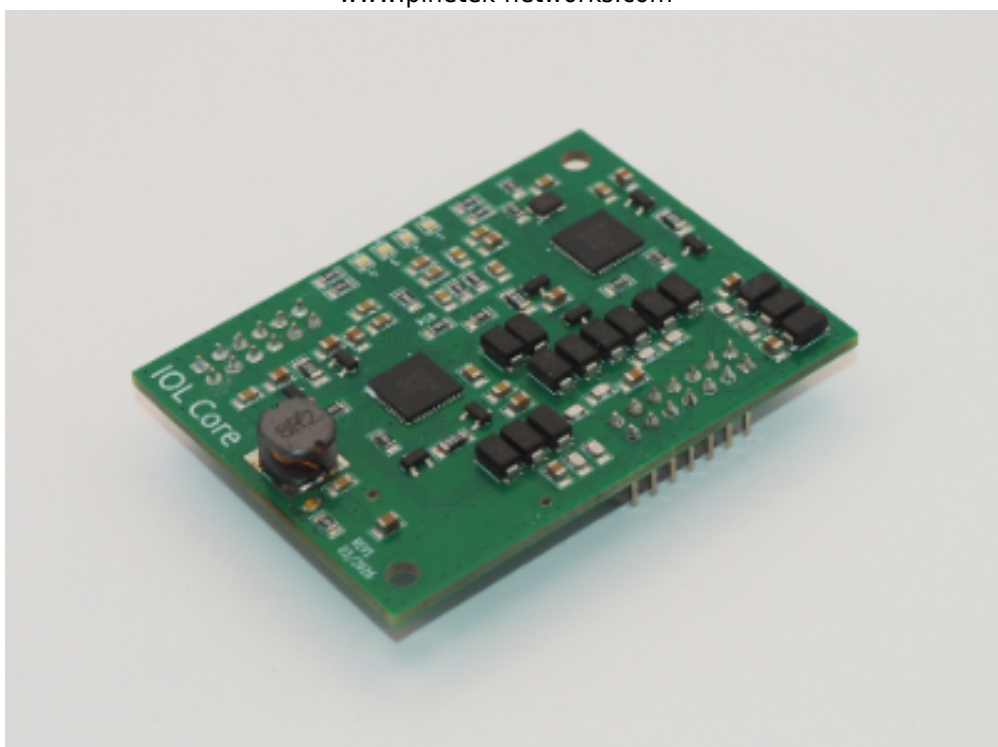


Table of Contents

Default flows for Node-RED	5
----------------------------------	---

Default flows for Node-RED

In case you want to restore the default flows in Node-RED, import the below nodes in your Node-RED instance:

<https://download.pinetek-networks.com/pinebox/examples/default-flows>

