

# 2 Getting started

Application Manual

[www.pinetek-networks.com](http://www.pinetek-networks.com)





# Table of Contents

**2 Getting started** ..... 5



## 2 Getting started

This section describes how to get started with the Pinebox, connecting to the web interface, configuring a distance sensor and transferring the nodes to Node RED. In Node-RED we will create flows to forward the data to dashboards and to the internal database.