

2 Getting started

Application Manual

www.pinetek-networks.com

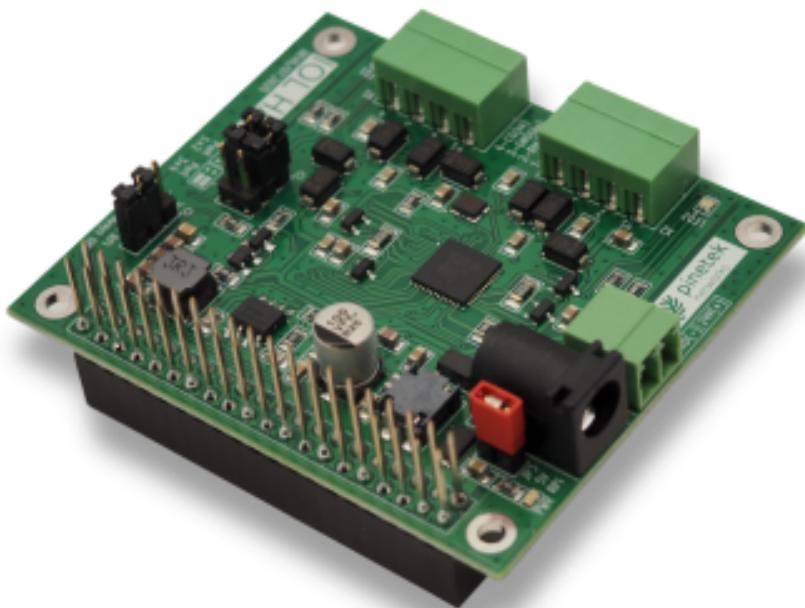


Table of Contents

2 Getting started	5
--------------------------------	---

2 Getting started

This section describes how to get started with the Pinebox, connecting to the web interface, configuring a distance sensor and transferring the nodes to Node RED. In Node-RED we will create flows to forward the data to dashboards and to the internal database.