
Default flows for Node-RED

Hardware manual

www.pinetek-networks.com

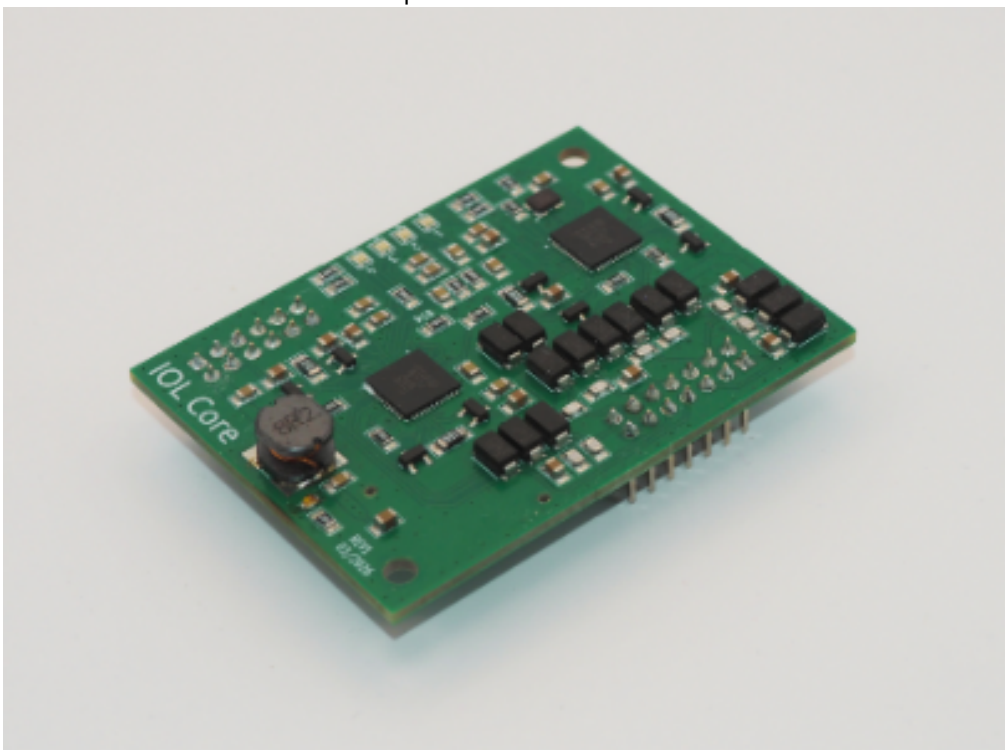

Pinetek Networks GmbH, Bachstelzenweg 8, 88677 Markdorf
info@pinetek-networks.com

2026-11-02

Table of Contents

Default flows for Node-RED 5

Default flows for Node-RED

In case you want to restore the default flows in Node-RED, import the below nodes in your Node-RED instance:

https://download.pinetek-networks.com/pinebox/examples/default-flows

