
insight

Hardware manual

www.pinetek-networks.com

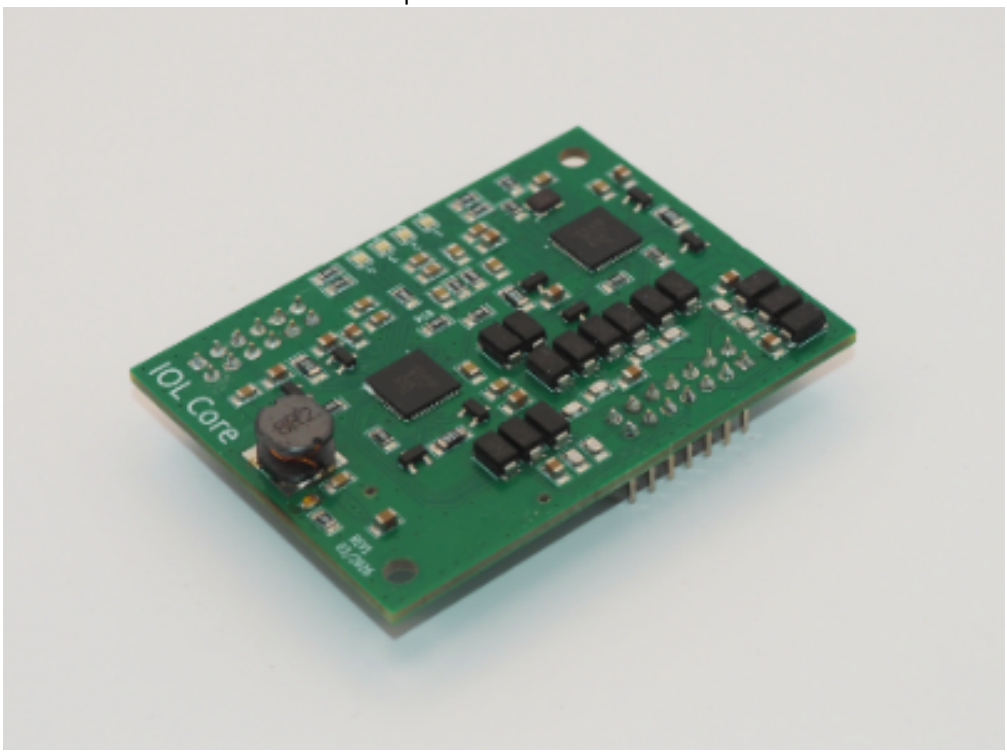

Pinetek Networks GmbH, Bachstelzenweg 8, 88677 Markdorf
info@pinetek-networks.com

2026-11-03

Table of Contents

insight 5

insight

- 1. Introduction
- 2. System Overview
- 3. Installation & Commissioning
- 4. Getting Started
- 5. Live Operation
- 6. Analysis
- 7. Line Configuration
- 8. Reporting
- 9. System Administration
- 10. OEE Calculation Reference
- 11. Pinebox Interface Reference
- 12. Troubleshooting & FAQ
- Appendices