4. Getting Started

Hardware manual

www.pinetek-networks.com

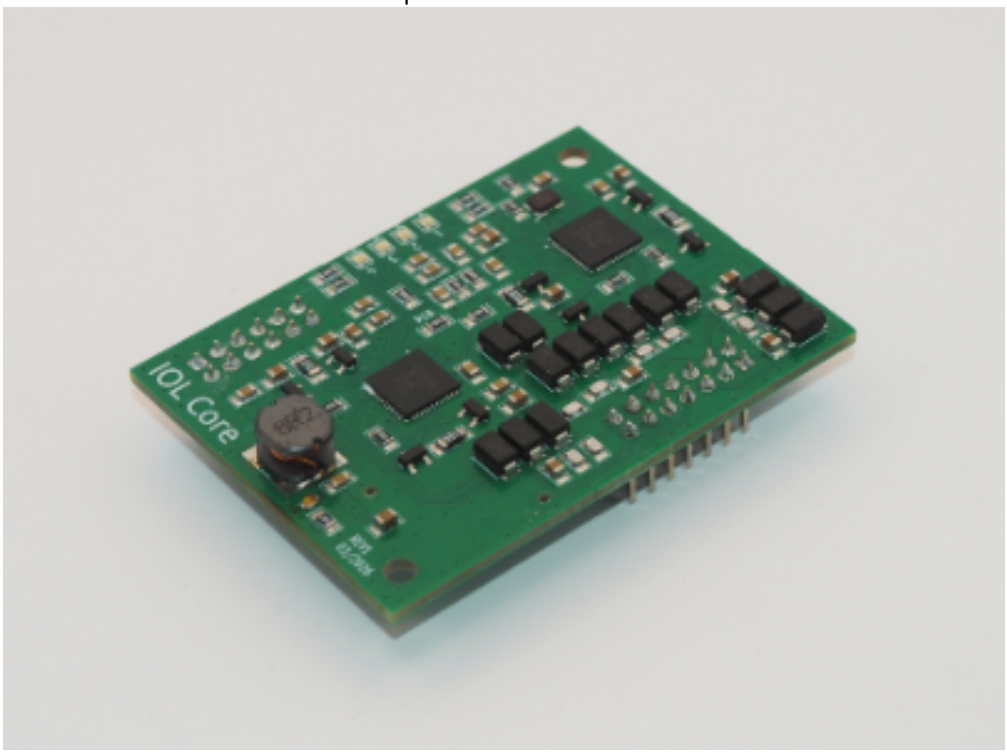


Table of Contents

4. Getting Started 5
4.1 Accessing the web interface 5
4.2 Signing in and user roles 5
4.3 Navigating the user interface 5
4.4 Changing the display language 6
4.5 Notifications 6

4. Getting Started


4.1 Accessing the web interface

Open a browser on any device in the plant network and navigate to:

```
http://<device-ip>:8000
```

No client software is required. The interface is responsive and can be used on desktop PCs, panel PCs and tablets.

4.2 Signing in and user roles

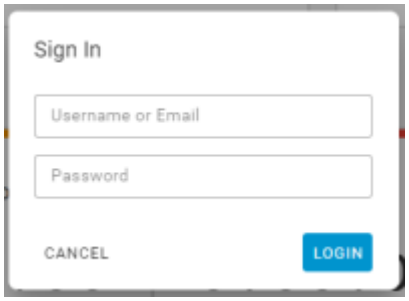


Sign in with your **username or e-mail** and **password**. Accounts are managed by an administrator (chapter 9.2).

Access levels build on each other. Every level includes the permissions of the levels below:

Level	Password	May access
Basic	no	Scoreboard only (intended for wall displays)
Operator	yes	+ Production Timeline, live Bottleneck view, Notifications
Supervisor	yes	+ all Analysis views, AI Assistant, Line Config
Admin	yes	+ System configuration, Users, Reports, Backup, SMTP, Version, License

If you navigate to a page your role does not permit, you are redirected to the Scoreboard.

4.3 Navigating the user interface

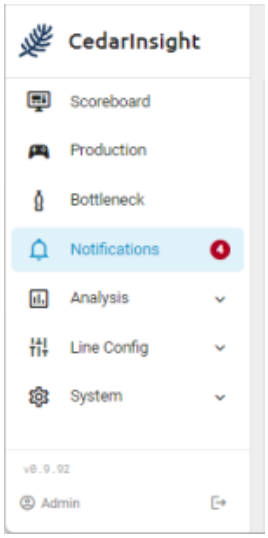

The sidebar on the left is the main navigation:

- **Scoreboard**: large-format live overview (chapter 5.1)
- **Production**: Production Timeline with state controls (chapter 5.2)
- **Bottleneck**: live bottleneck analysis (chapter 5.3)
- **Notifications**: system and production notifications(chapter 4.5)
- **Analysis** (expandable): OEE History, Bottleneck History, Production Analysis, Downtime, AI Assistant (chapter 6)
- **Line Config** (expandable): Program, Product, Counters, Cycle Stations, Sensors, Takt, Downtime (chapter 7)
- **System** (expandable): System, Backup, Users, Reports (Templates / Blocks / Layout), SMTP, Version (chapters 8–9)


Menu entries are only shown if your role permits them.

4.4 Changing the display language

Pinetek Insight is available in **English** and **German**. The language is a system-wide setting; it applies to the entire web interface and to generated PDF reports.

An administrator changes it under *System* → *System* → *Language* (chapter 9.1).

4.5 Notifications

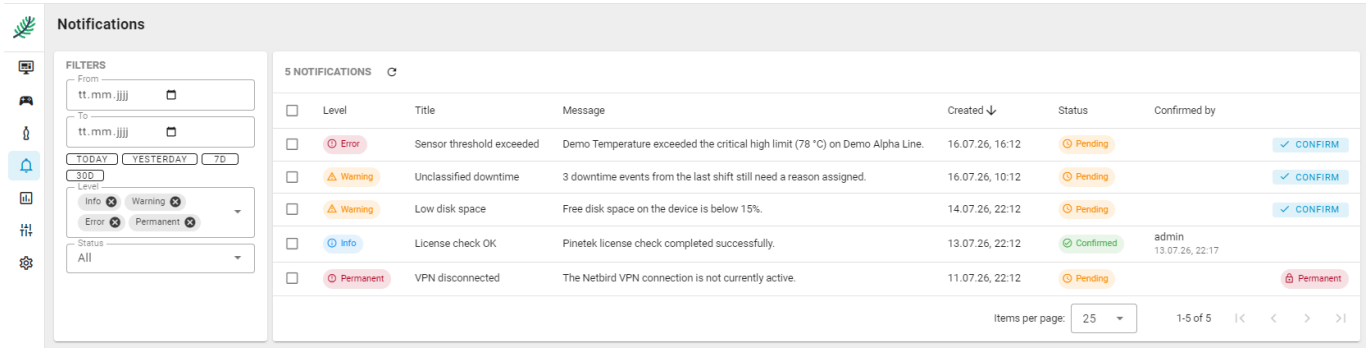

The system raises notifications for events that need attention, e.g. disk-space warnings or production events. Open them via **Notifications** in the sidebar.

- Each notification has a **level**: *Info*, *Warning*, *Error* or *Permanent*.
- Filter by status: *All*, *Unconfirmed*, *Confirmed*, *Permanent*.
- Select one or more notifications and press **Confirm** to acknowledge them. An optional **note** can be stored with the confirmation (applied to all selected entries). The confirming user and time are recorded.
- *Permanent* notifications represent persistent conditions and stay visible while the condition lasts.



Unresolvable warnings (e.g. low disk space) should be reported to your administrator.